

ENG

FIXLIFT WITH CONTROL REAL® 9000 PLUS

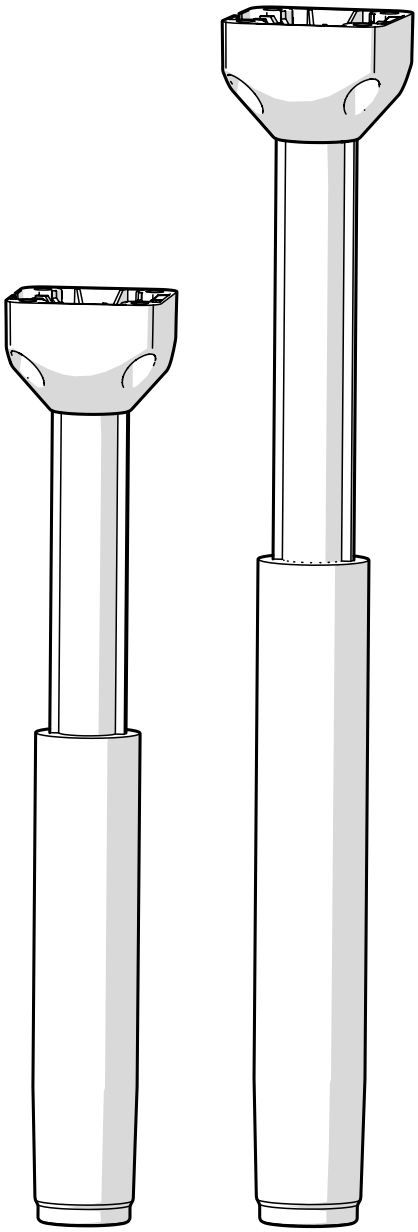

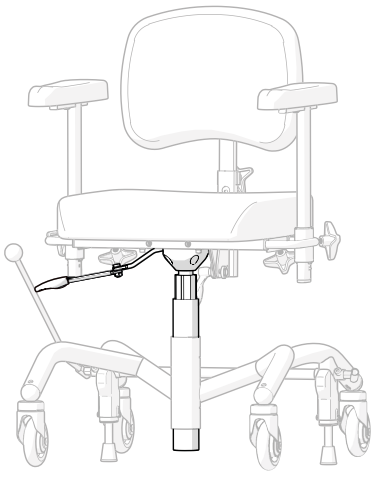

Translation of original assembly instruction
Instructions for assembly & handling

MERCADO MEDIC

Doc.nr: 20-08509-EN
Rev: 00

Skapad: 2025-05-28
Uppdaterad:

Table of content

1. Item list 3

2. Necessary tools 3

3. Warnings 4

4. Assembly instructions 4

4.1. Disassemble the seat 4

4.2. Disassemble the seat frame and control units under the armrest 5


4.3. Disassemble the fixlift 6


4.4. Mount the fixlift 6


5. Adjustment of the control unit beneath the armrest 7

6. Destruction and recycling 8

1. Item list

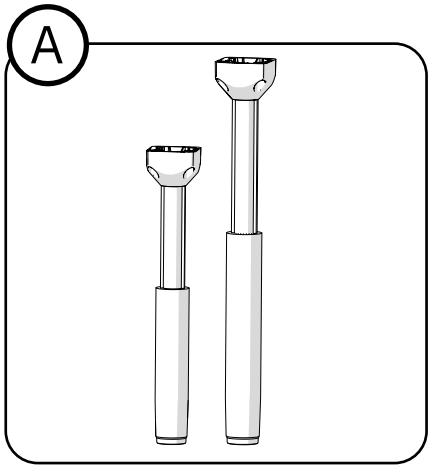

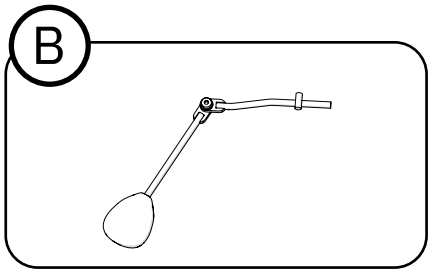

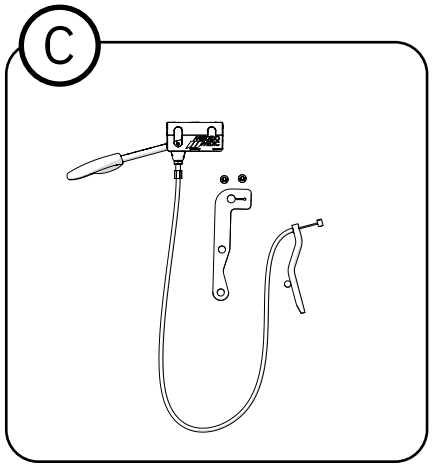

	Item no	Description
Ⓐ	805560	Fixlift. 140 mm <55kg With bracket
	805561	Fixlift. 140 mm 55-90kg With bracket
	805562	Fixlift. 140 mm >90kg With bracket
	805566	Fixlift. 200 mm <55kg With bracket
	805567	Fixlift. 200 mm 55-90kg With bracket
	805568	Fixlift. 200 mm >90kg With bracket
Ⓑ	802908	Seat height control under seat for seat angleadjustment, Adult
	802974	Seat height control under seat Seat height control under seat
	803016	Seat height control under seat for seatangle adjustment, Child
	803033	Seat height control under seat for fixed seat angle, Child
Ⓒ	803116	Seat height control under armr for fixed seat angle,Plus
	803117	Seat height control under armr for seat angle adjustment, Plus
	803506	Seat height control under armr fixed seatangle/ seatangleadjus

2. Necessary tools

- 5 mm Allen Key
- 6 mm Allen Key
- Torx T20, Torx T25

3. Warnings




Warning!
1. Crush hazard between lift and floor.

4. Assembly instructions


4.1. Disassemble the seat

Place the chair on a flat surface. Then begin by unscrewing the screws (1) that secure the gas spring adjustment bracket using a suitable Torx T25 tool. Note: This bracket is only used on certain chair models and may therefore be absent. Continue by loosening the screws (2) between the seat frame and the seat using a 5 mm Allen key. Note: Depending on the seat frame design, the screw positions may vary. Finally, remove the seat (3).

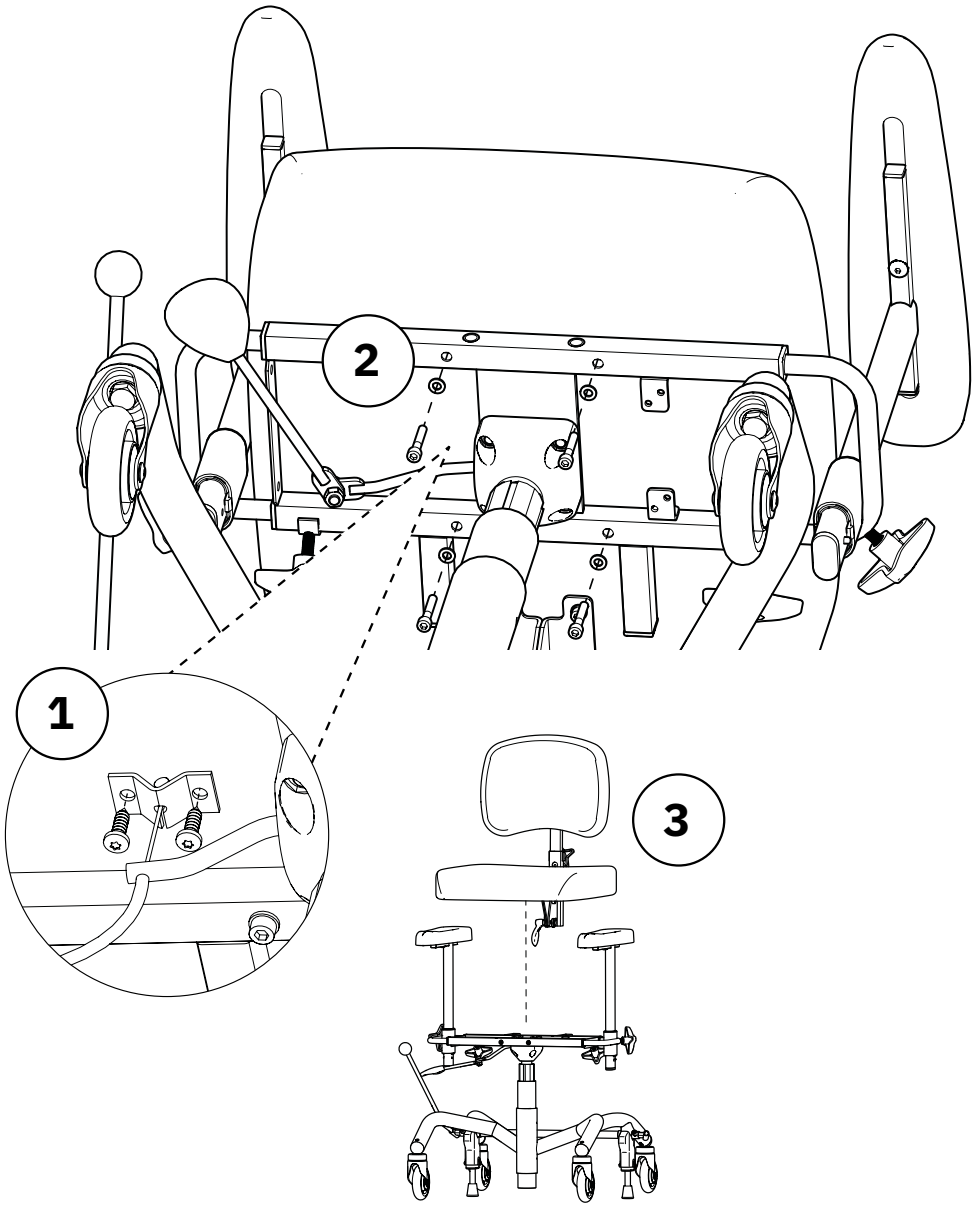



4.2. Disassemble the seat frame and control units under the armrest

If a seat height adjustment control beneath the armrest is used, first loosen the screws (1) that secure the control bracket to the armrest plate. Use a suitable Torx T20 tool for this step. Then, use a 5 mm Allen key to unscrew the four screws (2) that fasten the seat frame to the lift mechanism, and simultaneously remove the gas spring adjustment wire (3), if present. Also, make sure to collect the four nuts (4), which will come loose as a result of the disassembly.

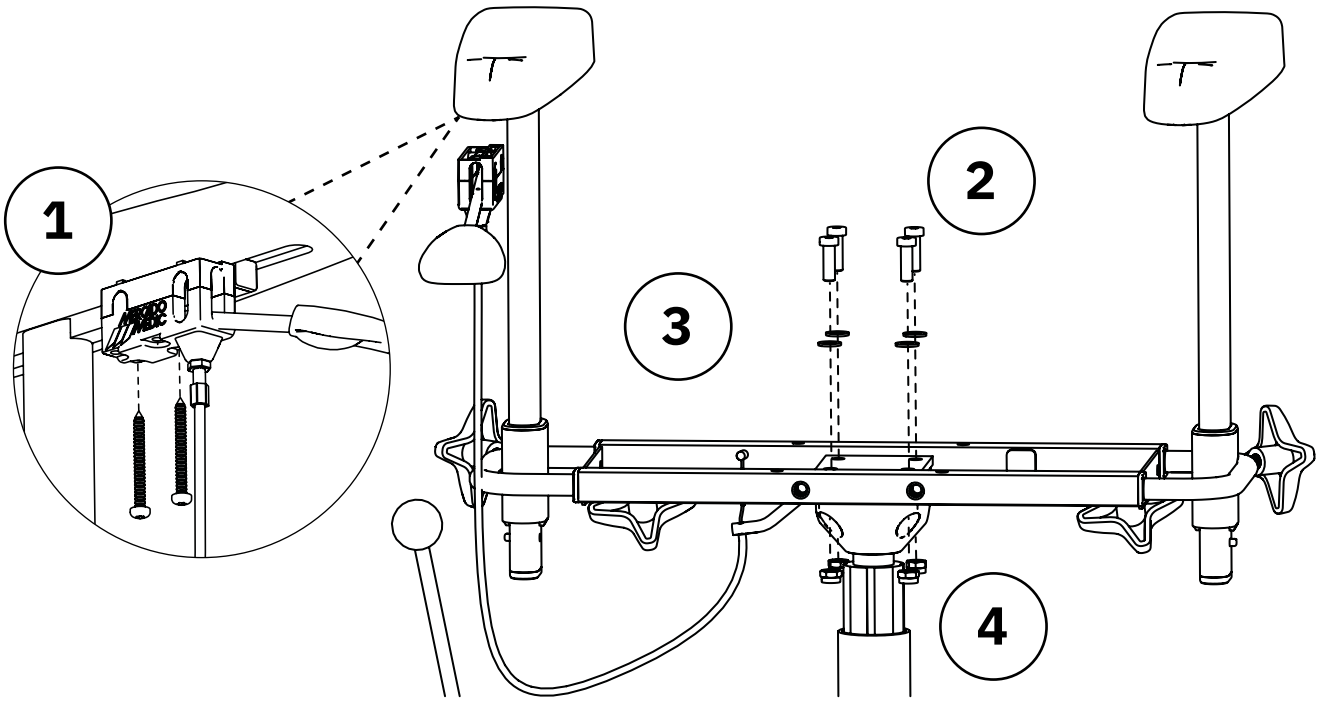


Finally, remove the seat frame (5) and the applicable seat height adjustment control (6 or 7).

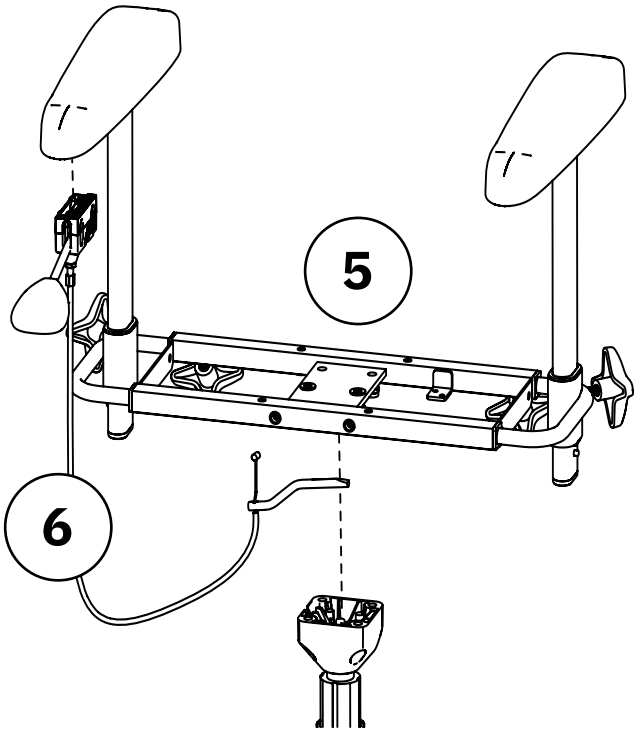

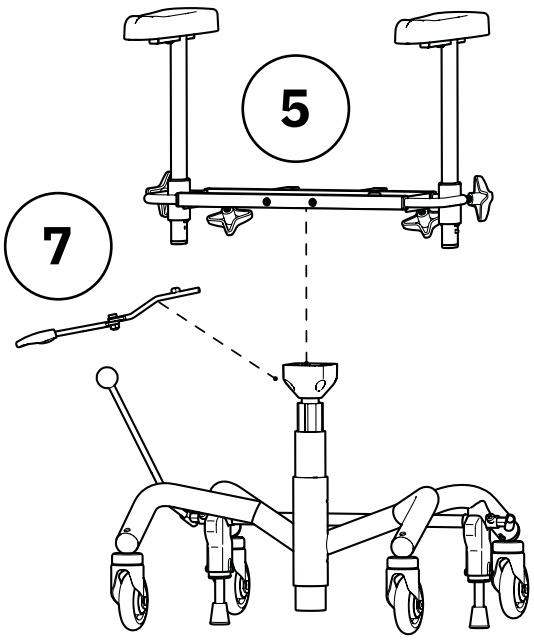


4.3. Disassemble the fixlift

Use a 6 mm Allen key to loosen the two screws (1) that secure the fixlift to the base. Then remove the fixlift. Warning: There is a risk of a crushing damage to occur between the floor and the fixlift when this component is disassembled.

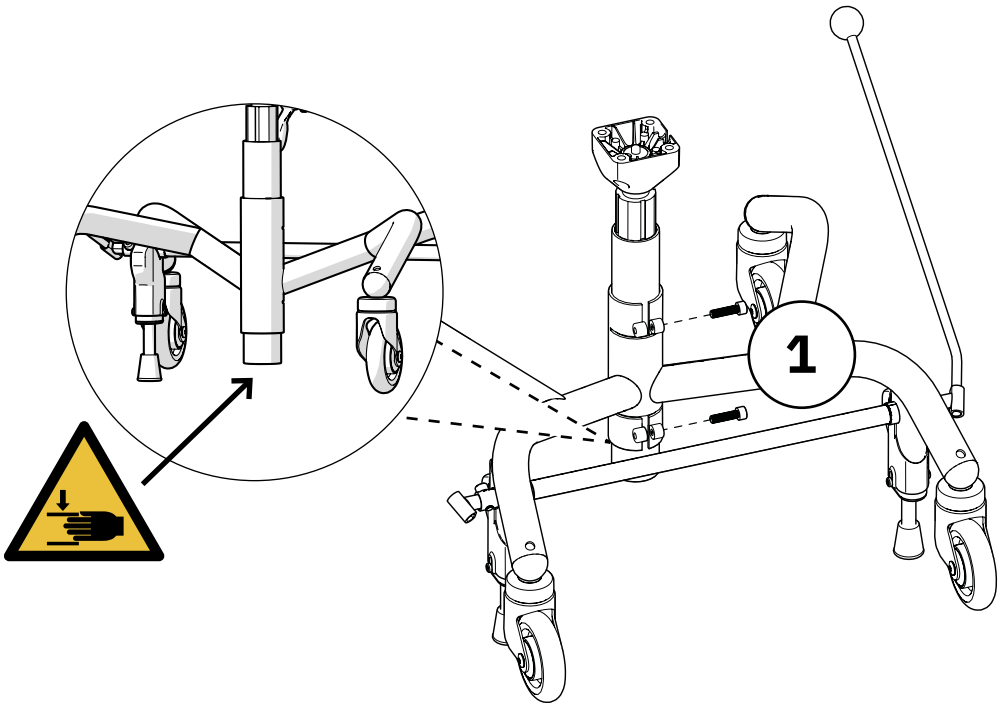


4.4. Mount the fixlift


To mount a new fixlift, follow the steps in this assembly instruction in reverse order. The new fixlift should be mounted with a clearance of 3 cm between the floor and the fixlift. If the chair is configured with a low seat height and an all-angle seat frame, the clearance should instead be 5 cm. When tightening the two screws into the central tube, the lower screw must be tightened to a torque of 18–20 Nm, while the upper screw should be tightened firmly enough to allow smooth adjustment of the up/down function.

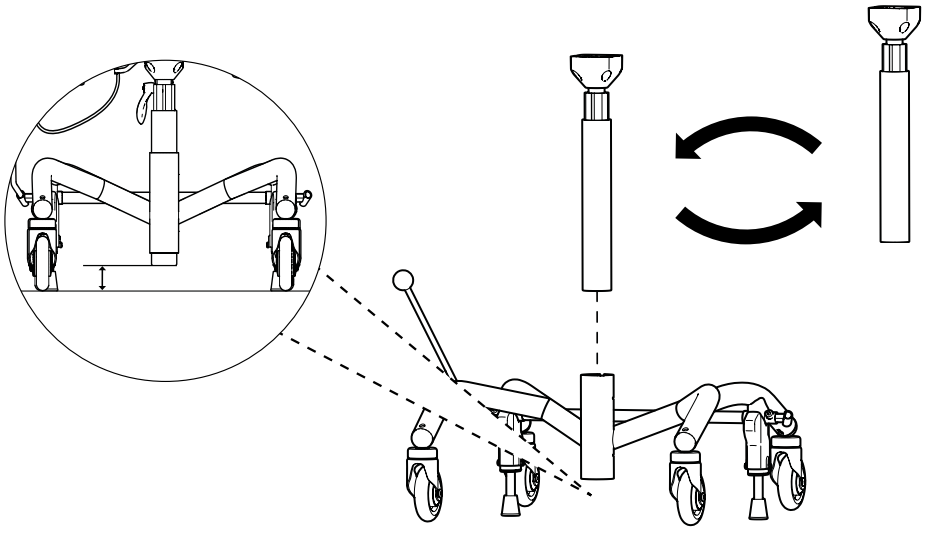


5. Adjustment of the control unit beneath the armrest


The control lever should be liftable by approximately 2 mm before the fixlift is activated.
Fine-tune the clearance by turning the wire nipple. Then tighten the wire nipple's locknut to lock the position.
Check the function.

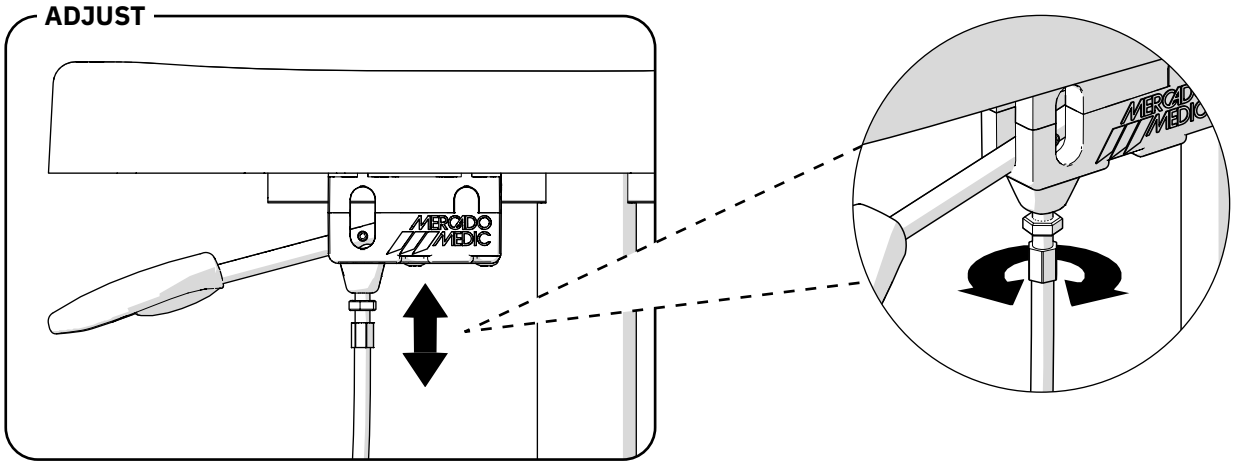

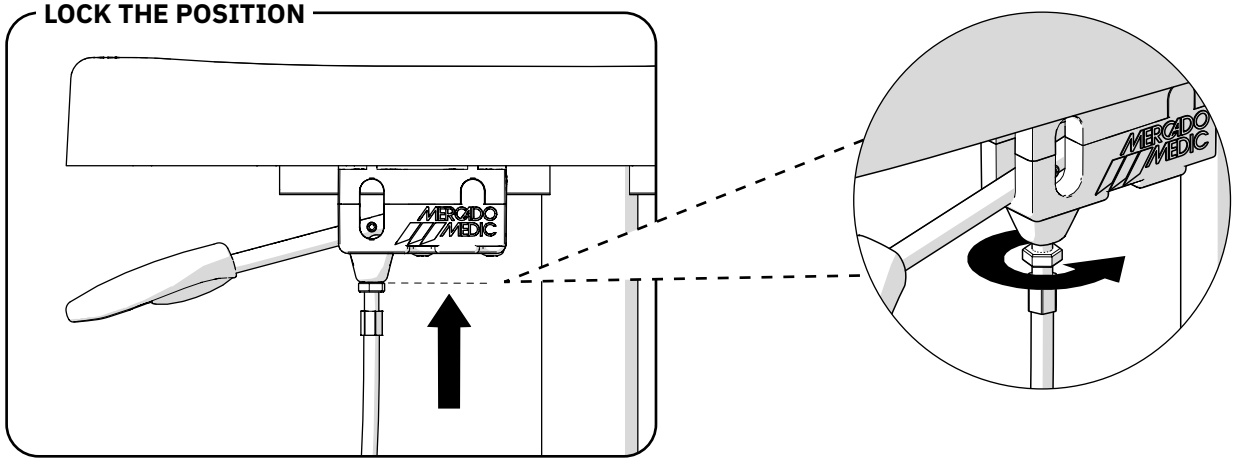


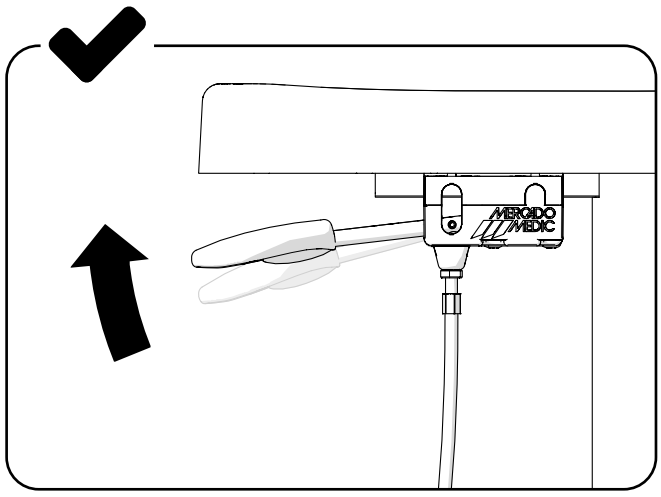


6. Destruction and recycling

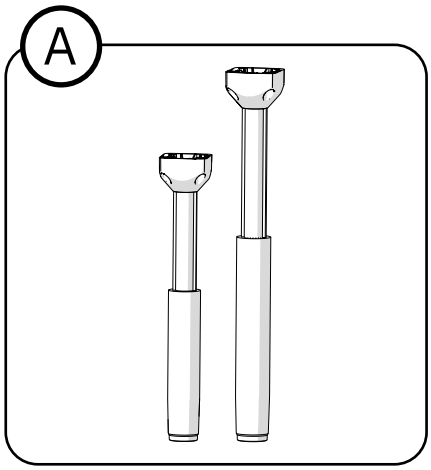

Ⓐ Sort as metal

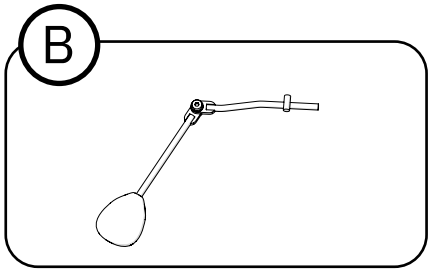

Ⓑ Sort as metal

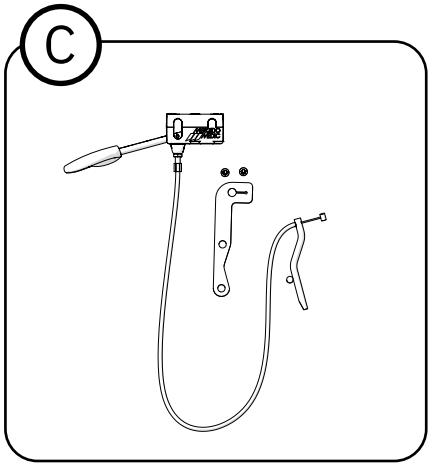

Ⓒ Sort as metal